
Rowmark.

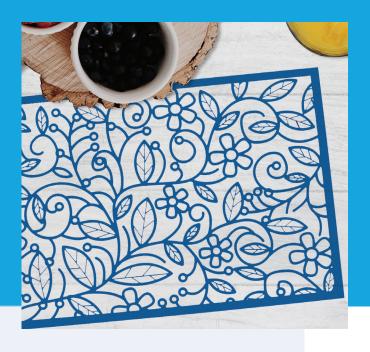

LaserMax®

Placemat

INSTRUCTIONS

Here we have a cool little project that will add a little color and pizzaz to anything!

We used 1/16" LaserMax® Sky Blue/White for this and it looks great!

- 1. Import your design and adjust power and speed settings.
- Insert material into the laser bed. Use the focus tool to adjust to the top of the material. Focusing should be done each with a new material.
- 3. Tape material to bed to ensure it doesn't move.
- 4. Run the job file.
- 5. After it's been cut, give it a once over in the sink with a soft bristle brush to clean it up.

A classy little placemat!

FILES INCLUDED





