


301

room 301



Jeremy A. Schultz

Sr. Accounting Manager

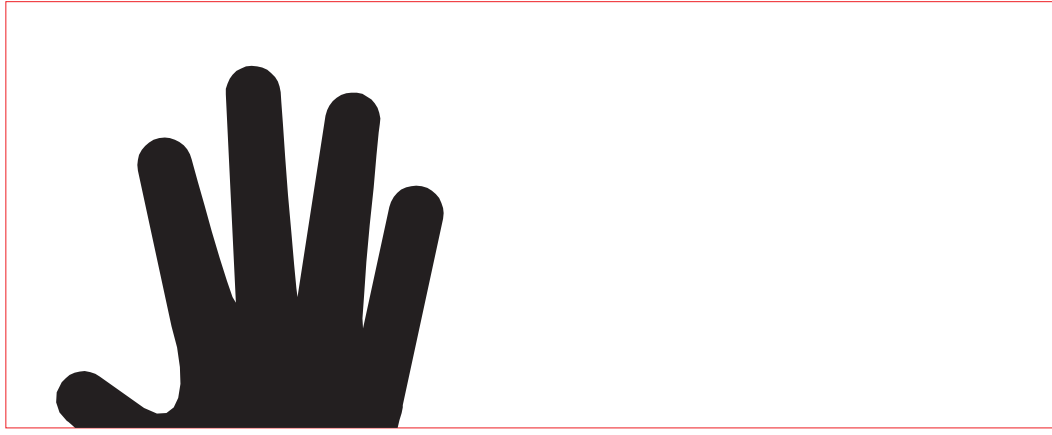

Top and bottom edges of insert will need to be beveled in order to fit into ClearPath[®] Profile inserts with a 30 degree angle bevel.

Reverse engrave hand on the back before vector cutting out the rectangle shape.




Top and bottom edges of inserts will need to be beveled in order to fit into ClearPath[®] Profile inserts with a 30 degree angle bevel.

301

301

room 301

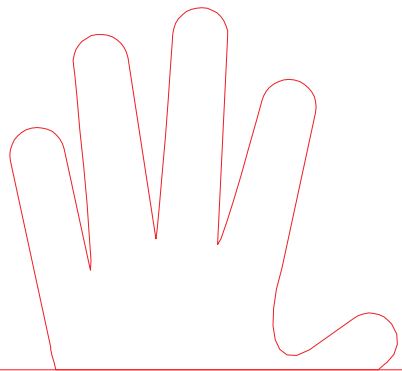

Jeremy A. Schultz

Sr. Accounting Manager